



Width Measurement


cms

Drop Measurement

cms

CURTAIN MEASURING GUIDE

Deep Pleat (Pole)

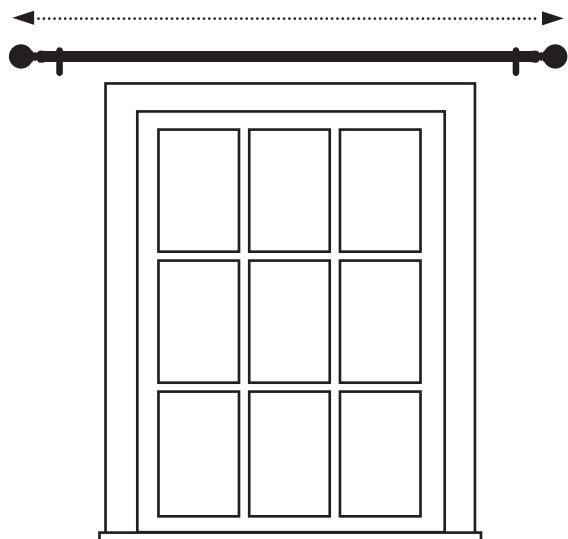


MEASURING WIDTH:

The pole should be fitted 15cm above your window top, with 15cm - 20cm excess either side of the window recess.

Measure the total width of the pole, excluding finials. Account for overlap. This is an additional measurement, normally 2.5cm, which allows the hanging curtains to overlap in the middle when they are closed.

MEASURING DROP:

Take the measurement from the bottom of the pole rings to your desired drop length.

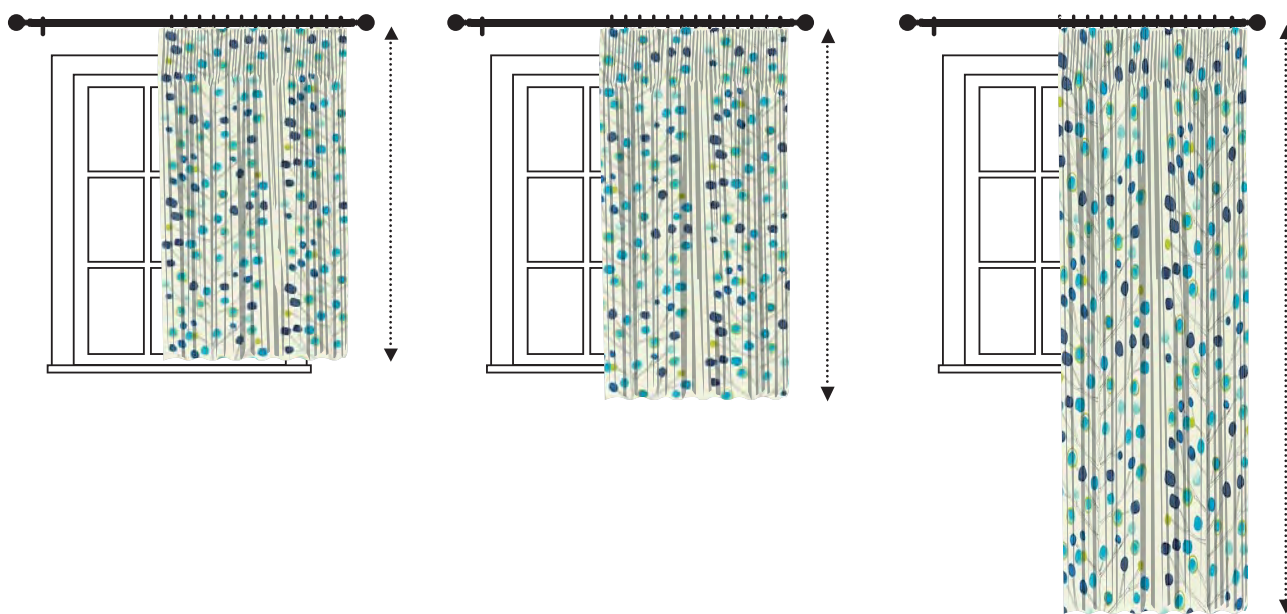

Sill Length
1cm above the sill

Below sill length
15cm below the sill

Full length
1.5cm from the floor