



Width Measurement


cms

Drop Measurement

cms

## CURTAIN MEASURING GUIDE

## Deep Pleat (Track)

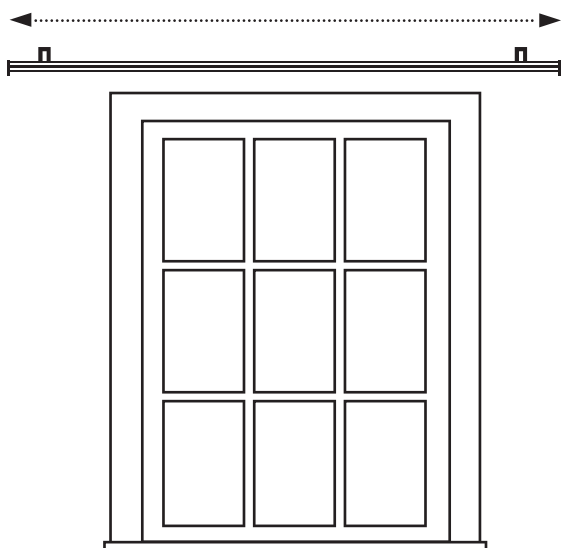

## MEASURING WIDTH:

The track should be fitted 15cm above your window top, with 15cm - 20cm excess either side of the window recess.

Measure the total width of the track.

Account for overlap. This is an additional measurement, normally 2.5cm, which allows the hanging curtains to overlap in the middle when they are closed.

## MEASURING DROP:

Take the measurement from the top of the track to your desired drop length.



Sill Length  
1cm above the sill

Below sill length  
15cm below the sill

Full length  
1.5cm from the floor