
Drop Measurement

cm

cms

CURTAIN MEASURING GUIDE

Eyelet Pole only

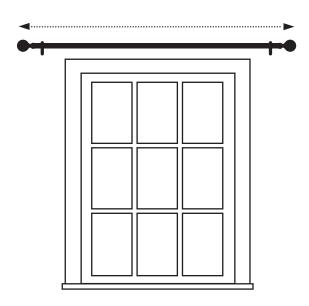

MEASURING WIDTH:

The pole should be fitted 15cm above your window top, with 15cm - 20cm excess either side of the window recess.

Measure the total width of the pole, excluding finials. Account for overlap. This is an additional measurement, normally 2.5cm, which allows the hanging curtains to overlap in the middle when they are closed.

MEASURING DROP:

Take the measurement from the top of the pole to your desired drop length. Add an additional 3cm to this length to allow for the fabric visible above the pole.

